


ATEX heating kit – Air System

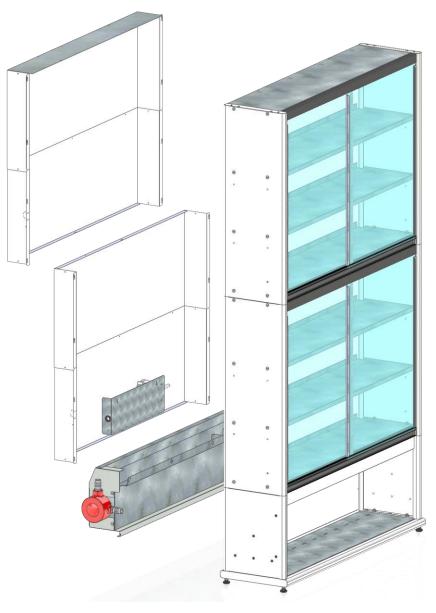

Assembly instruction

The heating kit is a option of Air System cabinet, this instruction refers to assembly of kit only. For use, safe, spare parts and others informations see the IST-216 Air System cabinet handbook on the CD-ROM.



ATEX heating kit – Air System Assembly instruction


Pagina 2 di 4

Istruzione nº 220 - Rev. 00 del 05/11/2018

WARNING

Consider the size and weights of the various components that will be moved.

Is fundamental constraint that the below mentioned installation steps are carried out by least two people with safety gloves and shoes.

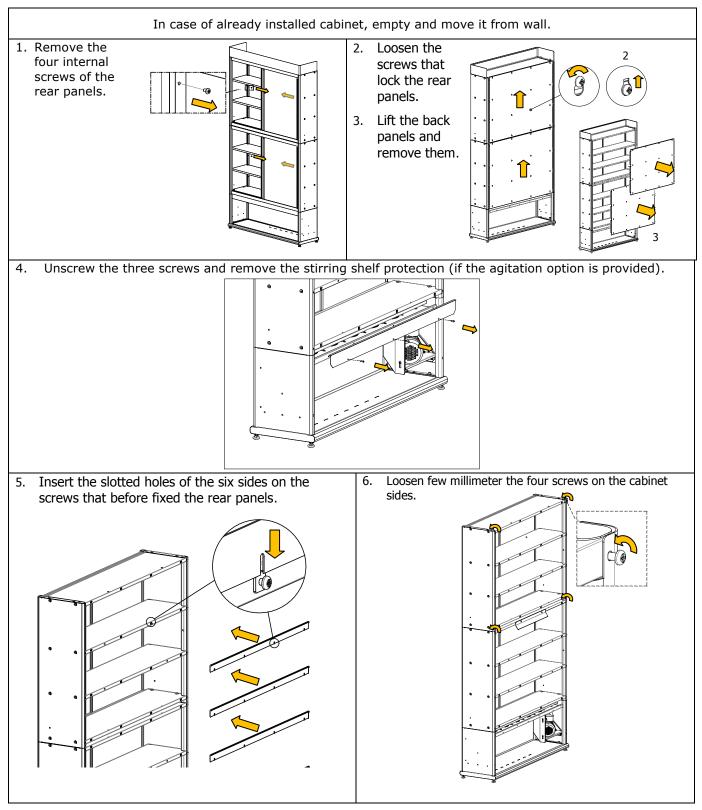




ATEX heating kit – Air System Assembly instruction

Pagina **3** di 4

Istruzione nº 220 - Rev. 00 del 05/11/2018

ΕN

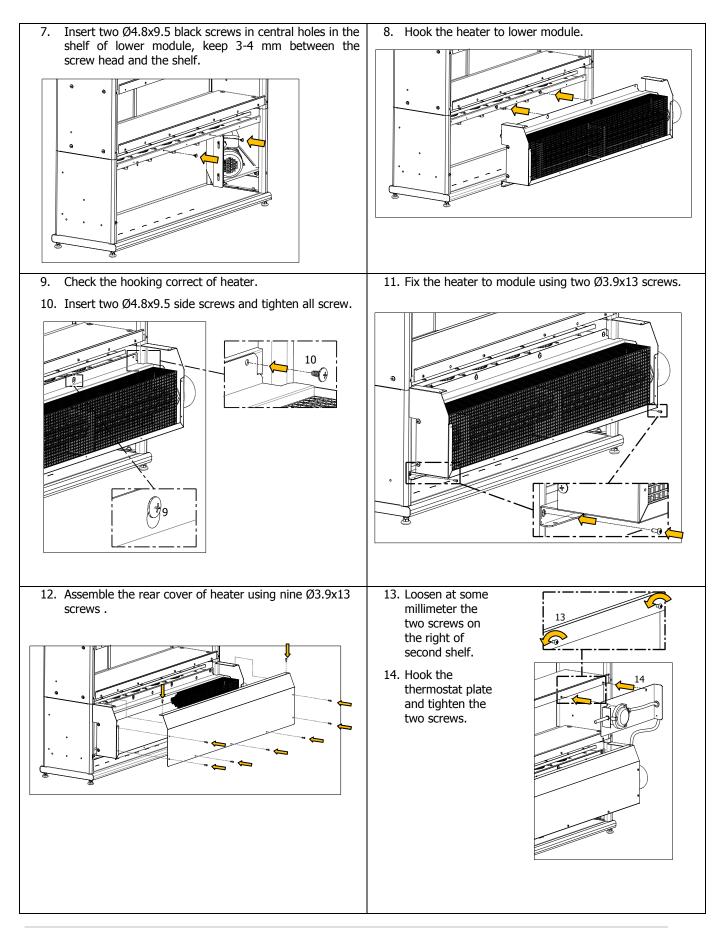



ATEX heating kit – Air System Assembly instruction

Pagina **4** di 4

Istruzione nº 220 - Rev. 00 del 05/11/2018

