


Operating Instructions


PMA.Evolution

EV01Y1

Paint-Mixing Scales for Use in Potentially Explosive Atmospheres of Zone 2.

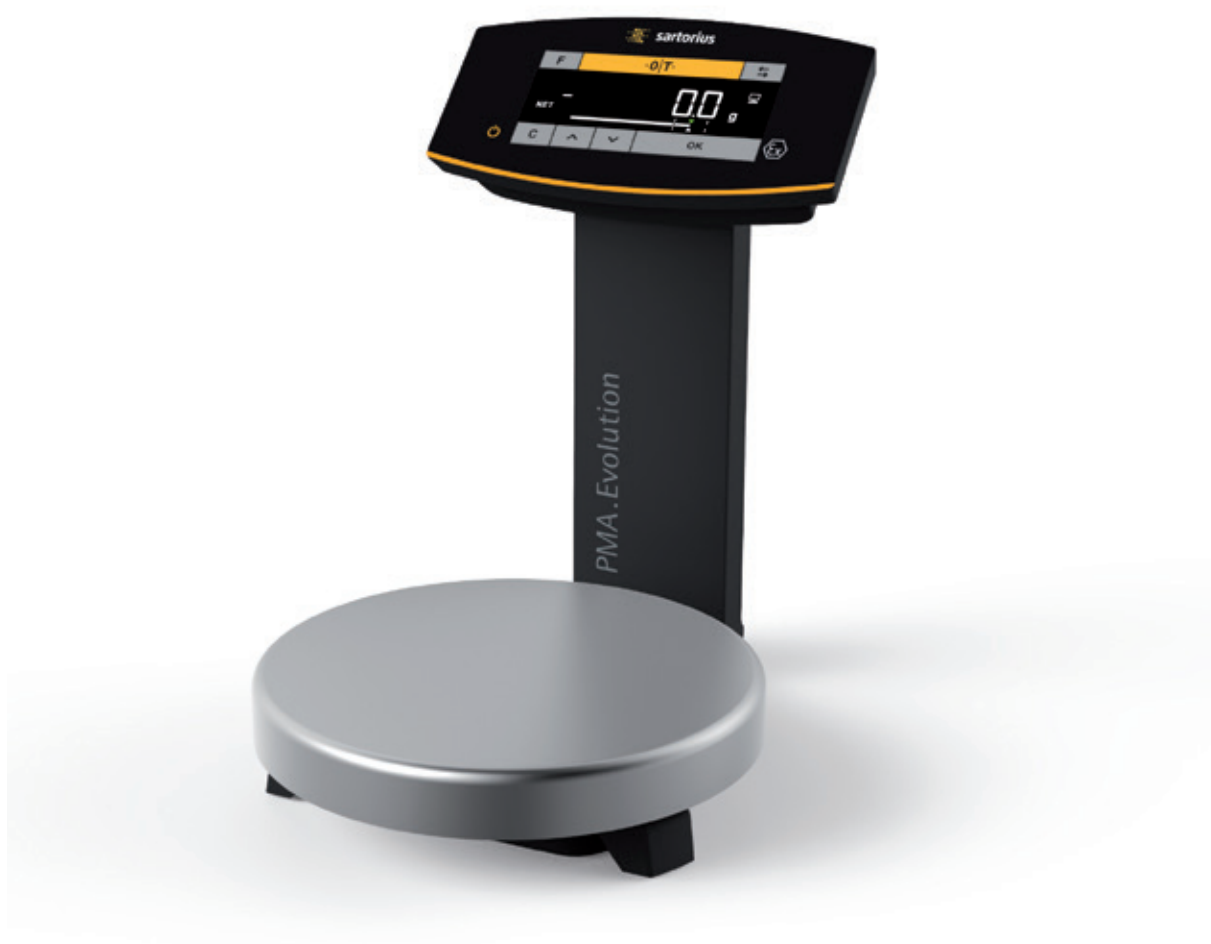

Contents

1 About this Document	4	7 Care and Maintenance	29
1.1 Validity.....	4	7.1 Cleaning.....	29
1.2 Symbols Used.....	4	7.2 Maintenance.....	29
2 Safety	5	8 Faults	30
2.1 General Safety Instructions.....	5	9 Storage	31
2.2 Installation Instructions.....	5	10 Disposal	31
2.3 Intended Use.....	7	11 Technical Specifications	32
3 Device Overview	8	11.1 General Data.....	32
3.1 Front View.....	8	11.2 Model-specific Data.....	33
3.2 Rear View.....	9	11.3 USB Port (PC Connection).....	33
3.3 Operating and Display Elements.....	10	11.3.1 Purpose.....	33
3.4 Menu List.....	12	11.3.2 Installing the Software Driver.....	33
4 Installation	16	11.3.3 Installing the Software Driver (Windows Update).....	33
4.1 Unpacking and Equipment Supplied.....	16	11.3.4 Installing the Software Driver (via CD).....	33
4.2 Selecting a Setup Location.....	16	11.3.5 Installation Instructions for Windows XP® and Above.....	34
4.3 Installing the Scale.....	17	12 Accessories	35
4.4 Power Supply.....	17	13 Conformity & Licenses	35
4.4.1 AC Adapter Assembly (Optional).....	17	13.1 EC Declaration of Conformity.....	35
4.4.2 Connecting the Scale.....	19	14 Appendix	39
4.5 Anti-theft Locking Device.....	20	14.1 Service.....	39
5 Commissioning	20	14.2 Device Dimensions.....	39
6 Operation	21		
6.1 Switching the Device On/Off.....	21		
6.2 Lock Keyboard/Weight Display.....	21		
6.3 Zeroing/Taring.....	21		
6.4 Adjustment.....	21		
6.4.1 Calibration.....	21		
6.5 Weighing.....	22		
6.5.1 Weighing with One Decimal Place.....	22		
6.5.2 Weighing with Two Decimal Places.....	22		
6.6 Applications.....	23		
6.6.1 Calculation by a Factor.....	23		
6.6.2 Weighing Using the Recalculation Function.....	24		
6.7 Menu Settings.....	25		
6.7.1 Accessing the SETUP Menu.....	25		
6.7.2 Configuring the Main Menu Settings.....	25		
6.7.2.1 Accessing the Setup Menu.....	25		
6.7.2.2 Language Setting.....	26		
6.7.2.3 Standard Default Settings (0.1g)/Polyrange (0.05g/0.1g) and Grams/PT./PD.....	26		
6.7.2.4 Activating the Toggle Key.....	26		
6.7.2.5 Activating the "LOCK" Function 	27		
6.7.2.6 Password Request.....	27		
6.7.2.7 Resetting the Scale: "RESET".....	28		

1 About this Document

1.1 Validity

These operating instructions apply to color-mixing scale models:

- EV01Y

1.2 Symbols Used

As a means of instruction and direct warning of hazards, all especially important text statements to be observed in these installation instructions will be marked as follows:



This instruction denotes a possible danger with medium risk of death or severe injury if not avoided.



This symbol denotes a possible danger with moderate or minor risk of injury if not avoided.



This symbol denotes a danger with low risk of damage to property if not avoided.



This symbol:

- is an indication of a function or setting on the device,
- indicates that caution should be exercised while working,
- identifies useful information.

The following means of representation are also used:

- Texts that follow this symbol are lists.
- Texts that follow this symbol describe activities which are to be performed in the specified order.
- ▷ Texts that follow this symbol describe the result of an action.

2 Safety

2.1 General Safety Instructions

- The scale meets the relevant EU Directives and applicable harmonized standards (see "EC Type Examination Certificate" in the Appendix).
- Improper use or handling, however, can result in damage and/or injury. Any improper use or operation of the scale will result in forfeiture of all claims under the manufacturer's warranty.
- Personnel need to have read and understood these installation instructions, including the safety instructions.
- If the scale is used in systems and under ambient conditions with higher safety requirements, you must observe the requirements and provisions applicable in your country.
- Always keep the equipment and scale freely accessible.



Make sure that the voltage rating printed on the AC adapter is identical to your local mains voltage.



The IP protection rating of the scale is IP 40 in accordance with EN 60529. The device must be handled carefully according to the IP protection rating. The environment must be suitably secured.

Ex Zone 2 (Category 3 Equipment)

- In accordance with Directive 94/9/EC, the EV01Y1 model is a category 3 device, suitable for use in Zone 2 potentially explosive areas.
EC Type Examination Certificates: FM15ATEX0008X
identification: II 3G Ex ic nA IIB T4 Gc



If the device is used in Zone 2 potentially explosive areas outside the Federal Republic of Germany, the relevant national electrical codes and safety regulations must be observed. Ask your dealer or Sartorius Service Center about the guidelines that apply in their country.

2.2 Installation Instructions



Do not operate the scale if its housing, AC adapter, or any connections are damaged. Immediately disconnect the damaged device from the power.



Do not expose the scale, the AC adapter, or the accessories supplied by Sartorius to extreme temperatures, aggressive chemical vapors, moisture, shocks, vibrations, or strong electromagnetic fields. Observe the conditions of operation described in the Specifications.

The casing on all connection cables as well as the casing on the wires inside the equipment housing is made of PVC. Chemicals that corrode this material must be kept away from these cables.



The operator shall be solely responsible for any modifications to the equipment and for connecting any cables or equipment not supplied by Sartorius! Information on operational quality is available upon request from Sartorius.
Only use original Sartorius accessories!



Note the IP protection class of the scale and the AC adapter. Do not allow liquid penetration. The protection class specifies the suitability of equipment for various environmental conditions (moisture, foreign bodies).



Before cleaning the AC adapter or the scale:
Disconnect all devices from the power.



The scale should only be opened by Sartorius-trained personnel with the power disconnected.
Do not open the AC adapter.



Avoid generating static electricity on the glass panel of the touch screen and plastic casing. The equipotential bonding conductor of the devices must be connected properly, according to commonly accepted technical standards.
Only clean the device as stipulated in the cleaning instructions.



Take care that the glass panel of the touch screen is not damaged (e.g. by falling objects, impact, or extreme pressure).
If the glass panel is damaged, disconnect the device from the power supply immediately.



The surface of the touch screen should not be touched with pointed, sharp, hard, or rough objects. You should only use the touch pen provided or your fingertips. Do not use parts of clothing (e.g. sleeves) or sponges for cleaning because these can scratch the surface (e.g. due to rivets, buttons in the sleeve, or sand in the sponge).
The device must be protected from unnecessarily extreme temperatures, aggressive chemical vapors, moisture, shocks, and vibrations. Note the connection data (see EC Type Examination Certificates for the device and/or the safety instructions, drawing no. 2021460).

Warnings Concerning Installation and Operation:



The equipment must only be used indoors. Avoid generating static electricity on glass and plastic parts. Connect the scale to the equipotential bonding conductor using a suitable low-resistance method. All electrical circuits are grounded and electrically connected to the metal parts of the device.

- The installation must be checked for correct function and safety by trained and qualified personnel at appropriate intervals (e.g. checking the cable for damage).
- Operating personnel must be trained to recognize faulty operating states and be able to initiate the necessary safety measures.



Lay the cables where they pose no risk of causing someone to trip.



Danger of Scale Damage!

Never close a paint can using a hammer while it is still on the weighing pan.
When closing, place the paint can on a firm, stable surface.

Observe the additional safety precautions and danger descriptions in subsequent chapters.


2.3 Intended Use

This scale is only intended for mixing colors and paints. The scale is used in Zone 2 potentially explosive areas. Appropriate containers must be used for each type of material.

The scale can be operated via the keypad as a stand-alone device or using application software (e. g. a paint-mixing program from a paint manufacturer) installed on a connected PC. The scale is connected to the PC/notebook installed outside of the potentially explosive area via a USB cable.

3 Device Overview


3.1 Front View

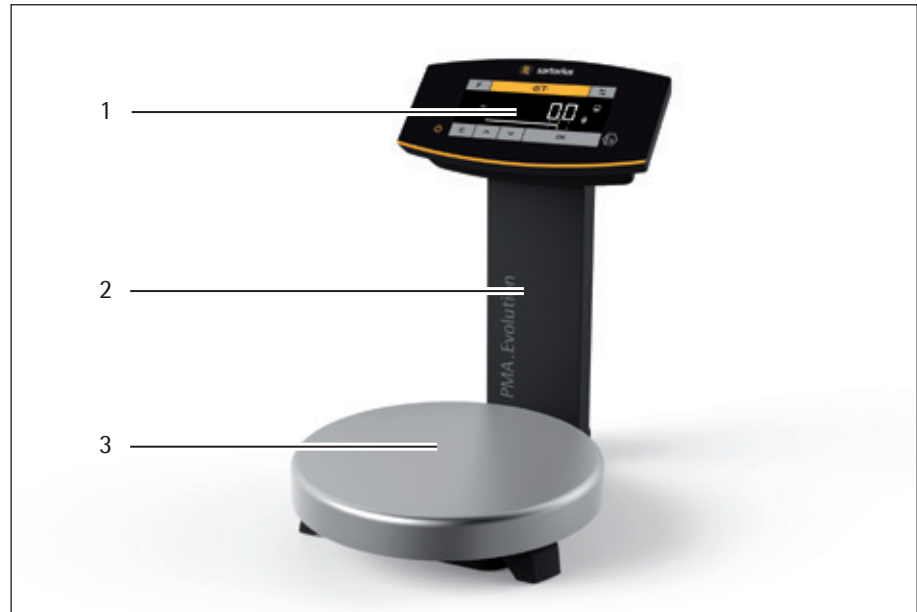

Item	Description
------	-------------

1	Operating and display elements (see also Chapter 3.3, page 10)
2	Stand
3	Weighing pan

3.2 Rear View

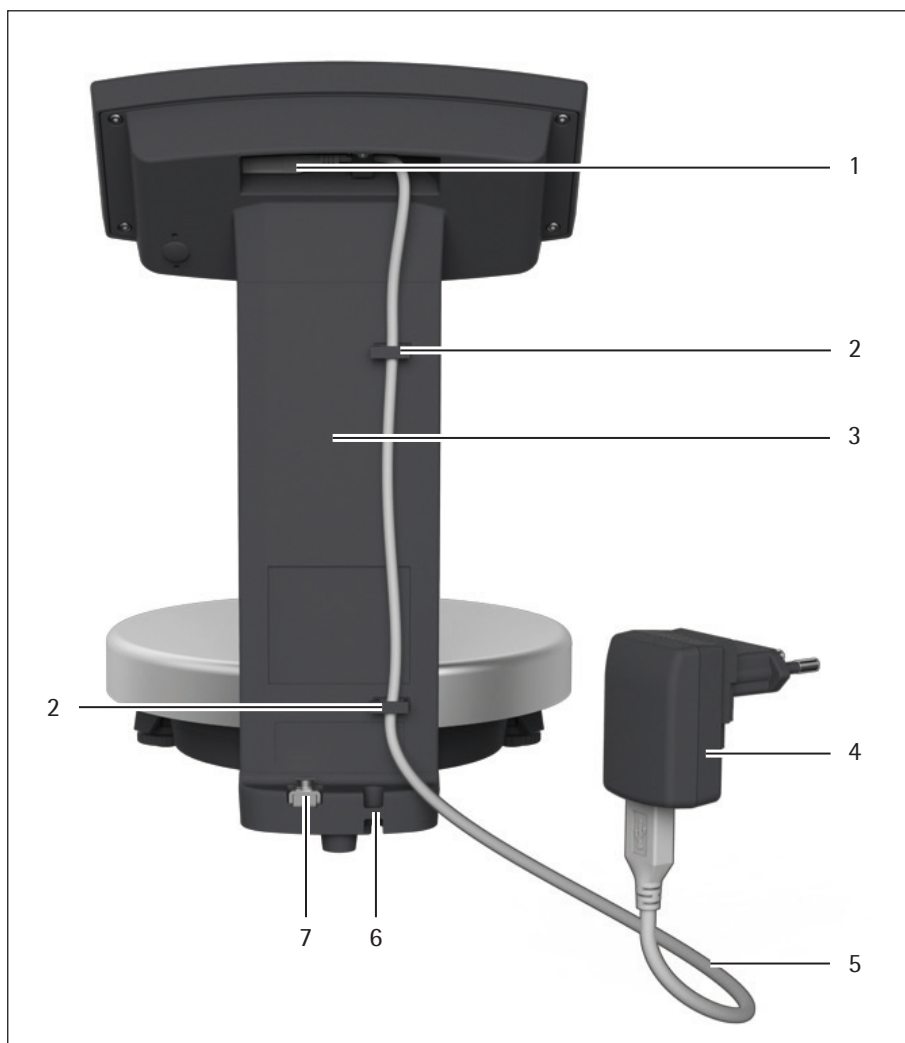

Item	Description
------	-------------


1	USB port
2	Cable holders
3	Stand
4	AC adapter with country-specific mains adapter (optional)
5	USB connection cable
6	Anti-theft locking device
7	Grounding terminal for equipotential bonding

3.3 Operating and Display Elements




Sharp or pointed instruments (such as ballpoint pens) can damage the device!

- The touch screen should only be operated by lightly pressing it using the tips of your fingers.

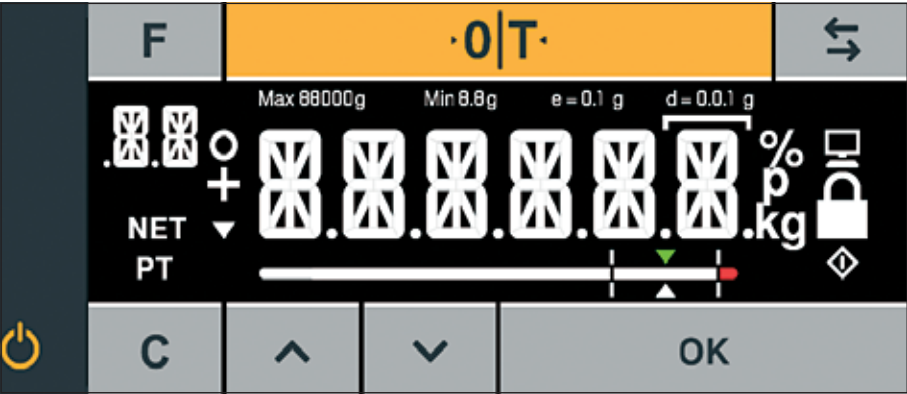

Key	Function
	Factor key for paint-mixing applications
	Zeroing / Taring
	Toggle key: Toggles the decimal places and/or unit Depending on the menu setting
	On /Standby
	Clear key / Display of correction factor for paint-mixing applications
	Up
	Down
	ENTER key / MEM key paint-mixing applications

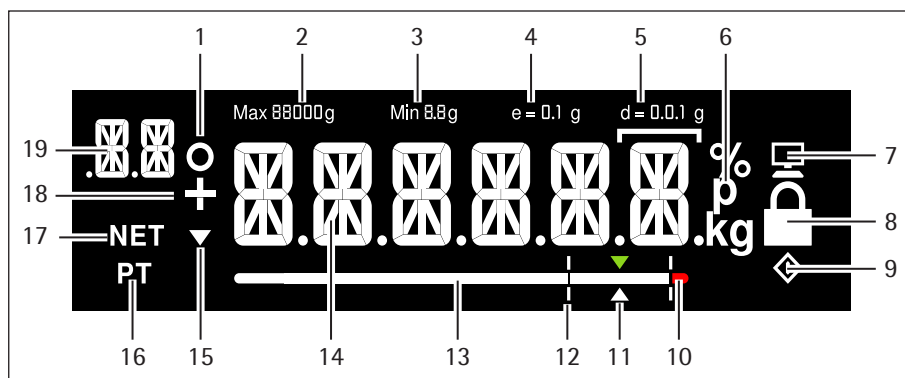

Item	Function
1	Activated function in the menu list (see Chapter 3.4, page 12)
2	Maximum weighing range
3	Minimum load Min (for verified models only)
4	Verification scale intervals (verified models only)
5	Readability of the scale (scale interval d)
6	Weight unit and stability indicator
7	Communication with the PC
8	Activating the "LOCK" function/function activated
9	Busy symbol indicates that an internal process is in progress
10	Tolerance range has been exceeded
11	Target value for bar graph
12	Tolerance range
13	Bar graph: Scaled display showing capacity usage (in percent)
14	Fourteen segment display
15	Trend display
16	Info on weight entry via application keypad (preset tare)
17	Net value
18	Plus (or minus) sign of the weight
19	Display: <ul style="list-style-type: none"> – Level setup level – Component/factor for paint-mixing applications

3.4 Menu List

The "o" in the active column indicates the activated function in the respective menu.

Level 1	Level 2	Level 3	Active	Level 4	Function	CODE
SETUP						1.
	-----	SCALE				1.1
		--- AMBIEN.			Setup location	1.1.1
			-----	V.STABL.	Very stable ambient conditions	1.1.1.1
			-----	o STABLE	Stable ambient conditions	1.1.1.2
			-----	UNSTAB.	Unstable ambient conditions	1.1.1.3
			-----	V.UNSTAB.	Very unstable ambient conditions	1.1.1.4
		--- FILTER			Application filter	1.1.2
			-----	FIN.RD.	Final readout	1.1.2.1
			-----	o FILL.WT.	Filling weight	1.1.2.2
		--- STAB.RG.			Stability range/stability	1.1.3
			-----	1/2-DIG.	1/2 digit/good	1.1.3.2
			-----	1-DIG.	1 digit/normal	1.1.3.3
			-----	o 2-DIG.	2 digits/sufficient	1.1.3.4
			-----	4-DIG.	4 digits/low	1.1.3.5
		--- AUTOZ.			Automatic zero/drift correction	1.1.6
			-----	ON	On	1.1.6.1
			-----	o OFF	Off	1.1.6.2
		--- WT.UNIT			Weight units	1.1.7
			-----	o GRAMS	Grams	1.1.7.2
			-----	PT.P.LB	Parts per pound	1.1.7.14
		--- DSP.DEC.			Accuracy	1.1.8
			-----	o ALL	Show all decimal places	1.1.8.1
			-----	POLYR.	Multi-interval lab	1.1.8.13
		--- CAL.UST.			Calibration/adjustment	1.1.9
			-----	o CAL.EXT.	External calibration/adjustment with default weight	1.1.9.1
			-----	LOCKED	CAL key/command locked	1.1.9.10
	APP.PRG.					1.3
		--- UNIT 2			Unit 2	1.3.1
			-----	o GRAMS	Grams	1.3.1.2
			-----	PT.P.LB	Parts per pound	1.3.1.14
		--- DEC 2			Second unit accuracy	1.3.2
			-----	ALL	Show all decimal places	1.3.2.1
			-----	o POLYR.	Multi-interval lab	1.3.2.13
		--- TOGGLE			Toggle key on/off	1.3.3
			-----	o OFF	Toggle key off	1.3.3.1
			-----	ON	Toggle key on	1.3.3.2

Continued on next page

Level 1	Level 2	Level 3	Active	Level 4	Function	CODE
(SETUP)	---	REC.MOD.			Recalculation	1.3.4
		---	o	TOTAL	Gross weight	1.3.4.1
		---		INDIV.	Individual	1.3.4.2
	GEN.SRV.					1.9
	---	MEN.RES.			Menu reset	1.9.1
		---		DEFAULT.	Loads default menu	1.9.1.1
		---	o	NO	Stand-by	1.9.1.2
DEVICE						2.
	--- EXTRAS					2.1
	---	MENU			Menu	2.1.1
		---	o	ENABLE	Menu can be edited	2.1.1.1
		---		RD.ONLY.	Menu read only	2.1.1.2
	---	KEYS			Key function enabled/locked	2.1.3
		---	o	ENABLE	Keypad enabled	2.1.3.1
		---		LOCKED	Keypad locked	2.1.3.2
	---	BACKLT.			Background light	2.1.4
		---		10 PCT.		2.1.4.1
		---		20 PCT.		2.1.4.2
		---		30 PCT.		2.1.4.3
		---		40 PCT.		2.1.4.4
		---		50 PCT.		2.1.4.5
		---		60 PCT.		2.1.4.6
		---	o	70 PCT.		2.1.4.7
		---		80 PCT.		2.1.4.8
		---		90 PCT.		2.1.4.9
		---		100 PCT.		2.1.4.10
	---	BARGR.			Bar graph on/off	2.1.5
		---		OFF	Display without bar graph	2.1.5.1
		---	o	ON	Display with bar graph	2.1.5.2
	---	ON.MODE			Switch-on behavior	2.1.6
		---	o	ON/STB.	On/standby	2.1.6.3
		---		AUTO.ON	Automatic on	2.1.6.4
	---	LOCK			Lock weight display	2.1.9
		---	o	OFF	Display on	2.1.9.1
		---		ON	Display off	2.1.9.2
	---	BAR.MOD			Bar graph mode	2.1.10
		---	o	NORMAL	Normal width	2.1.10.1
		---		WIDE	Extra wide	2.1.10.2

Continued on next page

Level 1	Level 2	Level 3	Active	Level 4	Function	CODE
DEVICE	INTERF.					2.2
	---	PROT.			Data transfer protocol	2.2.1
		----	o	SBI	SBI protocol	2.2.1.1
		----		XBPI	XBPI protocol	2.2.1.2
	---	BAUD			Baud rate	2.2.2
		----		600	600 baud	2.2.2.3
		----		1200	1200 baud	2.2.2.4
		----	o	2400	2400 baud	2.2.2.5
		----		4800	4800 baud	2.2.2.6
		----		9600	9600 baud	2.2.2.7
		----		19200	19200 baud	2.2.2.8
		----		38400	38400 baud	2.2.2.9
		----		57600	57600 baud	2.2.2.10
	---	PARITY			Parity bit	2.2.3
		----	o	ODD	Odd	2.2.3.3
		----		EVEN	Even	2.2.3.4
		----		NONE	No parity check	2.2.3.5
	---	STOPBT.			Number of stop bits	2.2.4
		----	o	1 BIT		2.2.4.1
		----		2 BITS		2.2.4.2
	---	HANDSH.			Type of handshake	2.2.5
		----		SOFTW.	Software handshake (X-On/X-Off)	2.2.5.1
		----		HARDW.	Hardware handshake (RTS/CTS)	2.2.5.2
		----	o	NONE	No handshake	2.2.5.3
	---	DATABT.			Number of data bits	2.2.6
		----	o	7 BITS	7 data bits	2.2.6.1
		----		8 BITS	8 data bits	2.2.6.2
COMMUN.					Communication parameters	3.
	----	SBI			SBI communication parameter	3.1
	---	MAN.AUT.			Output	3.1.1
		----		MAN.W/O	Print individual value without stability	3.1.1.1
		----		MAN.W/	Print individual value after stability	3.1.1.2
		----	o	AUT.W/O	Print automatically without stability	3.1.1.4
		----		AUT.W/	Print automatically after stability	3.1.1.5
	---	CANCEL			Cancel automatic output	3.1.2
		----	o	OFF	Cancel not possible	3.1.2.1
		----		ON	Cancel by pressing Print key	3.1.2.2
	---	FORMAT				3.1.3
		----	o	16 CHR.		3.1.3.1
		----		22 CHR.		3.1.3.2

Continued on next page

Level 1	Level 2	Level 3	Active	Level 4	Function	CODE
INPUT						4.
- - - -	PASSWD.				Password	4.1.
	- - -	NEW PW			Change/enter password	4.1.1
INFO					Information	5.
- - - -	VER.NO.				Version number (firmware)	5.1
- - - -	SER.NO.				Serial number	5.2
- - - -	MODEL				Model designation	5.3
- - - -	TYPE				Name/type information	5.4
- - - -	INTRO				Intro text (if available)	5.5
LANG.					Language selection	6.
- - - -	D				German	6.1
- - - -	UK/US		o		English	6.2
- - - -	F				French	6.4
- - - -	I				Italian	6.5
- - - -	E				Spanish	6.6
- - - -	NL				Dutch	6.7
- - - -	P/BR				Portuguese	6.8
- - - -	PL				Polish	6.9
- - - -	TR				Turkish	6.10
- - - -	PYC				Russian/Cyrillic	6.11
- - - -	SLO				Slovenian	6.12
- - - -	SRB				Serbian	6.13
- - - -	CODES				Number codes	6.25

4 Installation

4.1 Unpacking and Equipment Supplied

- ▶ Open the packaging, making sure to remove all parts carefully.
- ▶ After unpacking the device, check it immediately for any external damage.
- ▶ If you detect any damage, proceed as directed in Chapter 7 "Care and Maintenance," page 29.
- ▶ Save the box and all parts of the packaging for any future transport. All cables should be unplugged when transporting.

The following parts are included in the equipment supplied:

Model	Evolution
Large weighing pan: Ø 233 mm	x
USB cable	x
AC adapter with country-specific mains adapter	Optional
Installation instructions	x

4.2 Selecting a Setup Location

Select the right setup location:

- Set up the device on a stable, even surface that is not exposed to vibrations.
- Maintain free access to the device at all times.

Choose a location that is not subject to the following negative influences:

- Heat (heater or direct sunlight)
- Drafts from open windows, A/C systems, and doors
- Extreme vibrations during weighing
- Heavy "traffic areas" (personnel)


Acclimatization

Condensation from humidity can form on the surfaces of a cold device when it is brought into a warm area. You should therefore let a device acclimatize for approximately two hours disconnected from its power source before reconnecting it to the supply voltage.

4.3 Installing the Scale

IMPORTANT

The scale must be disconnected from the power supply for all assembly work.

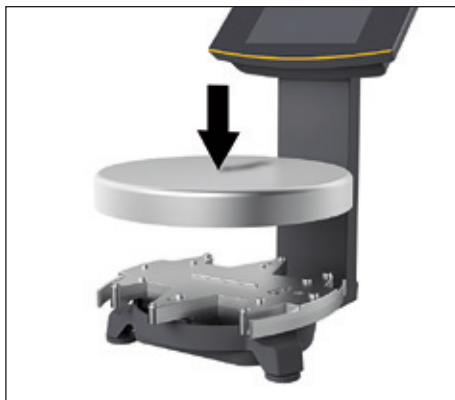

Inserting the Weighing Pan

- Place the weighing pan onto the scale from above.

4.4 Power Supply

The scale is connected to the power supply via a PC/notebook or using the optional AC adapter YPS06-USB (see Chapter 12 "Accessories," page 35), which is supplied with mains adapters for use in various countries.

Power supply via the AC adapter is only required:

- When no PC or notebook is available.
- In exceptional cases, when the output power of the USB interface of the PC or notebook is not sufficient.

The assembly is described in the following.


4.4.1 AC Adapter Assembly (Optional)



Using the wrong mains adapter may cause fatal electric shock and damage the equipment.

Never plug the mains adapter into the socket when it is disconnected from the AC adapter (danger of electrical shock).

- Use the right mains adapter for your mains power supply.

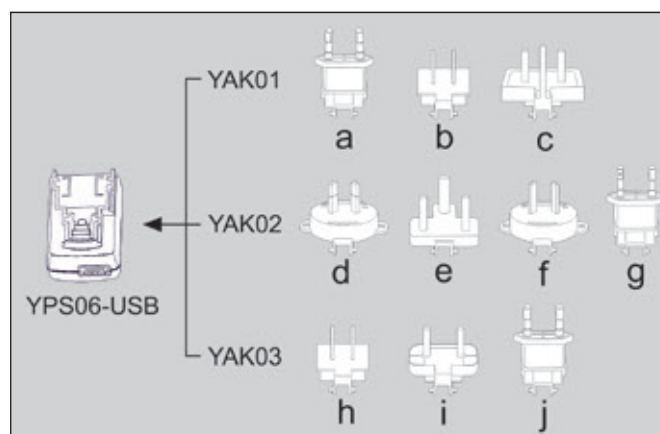

Mains adapter set YAK01

Bag	Region/Country
a) transparent	Europe/EU (except United Kingdom)
b) blue	USA
c) yellow	United Kingdom


Mains adapter set YAK02

d) red	Australia
e) turquoise	South Africa
f) white	Argentina
g) pink	Brazil


Mains adapter set YAK03

h) light brown	China
i) black	India
j) green	Korea

- Push (1) and slide (2) the mains adapter required for your power supply into the opening of the AC adapter module.
When doing this, the mains adapter needs to lock into position.

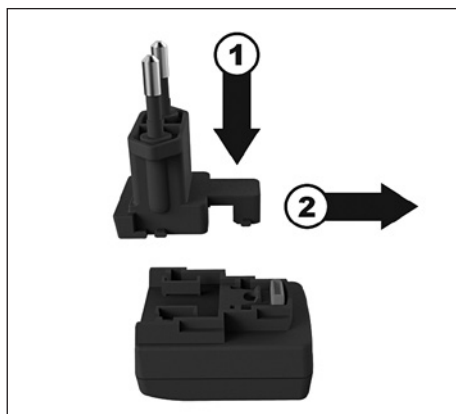**Removing/Replacing the Mains Adapter**

- Unlock (1) and then remove the mains adapter (2).

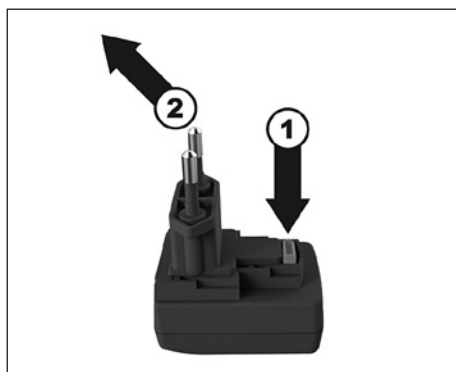**Power Connection/Safety Precautions**

- Only use original Sartorius AC adapters.
The AC adapter has an IP rating of IP40 in accordance with EN60529 | IEC60529.
- Make sure that the voltage rating printed on this unit matches the voltage at the place of installation.
- If the stated supply voltage or the plug design of the AC adapter does not comply with your country's standard, please inform your nearest Sartorius representative.
- The power must be connected in accordance with the regulations applicable in your country.


4.4.2 Connecting the Scale

Connecting the Scale

- ▶ Insert the USB cable plug into the USB socket on the back of the display.



- ▶ Loosen the screw (1) on the lock.
- ▶ Swivel the lock over the USB cable.
- ▶ Re-tighten the lock screw.

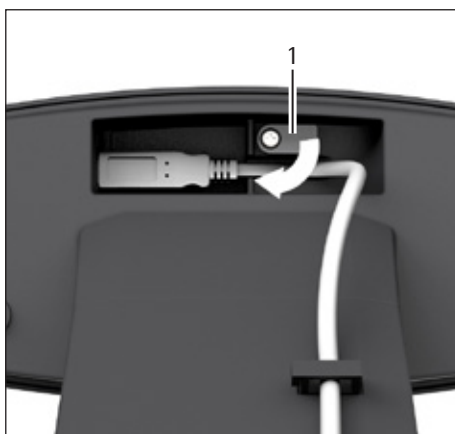

Laying the USB Cable

- ▶ Lay the USB cable through the cable holders on the back of the scale.



Connecting the Grounding Cable

This explosion-protected system should be set up according to commonly accepted technical standards. The applicable national electrical code and safety regulations for your particular country must be observed.

Before commissioning the scale, a check must be carried out by or under the supervision of a qualified electrician to ensure that the system is in good working order.

Check whether or not the competent authorities (e.g., industrial supervisory board) need to be informed. It is also necessary to carry out inspections of the system during operation.

Inspection intervals should be such that any significant defects that may occur can be identified in good time. Inspections should be carried out at least once every three years. The applicable requirements and guidelines should also be observed during operation.


Establish a low resistance connection from the scale to a customer-supplied equipotential bonding conductor connection via the equipotential bonding conductor connection on the device using a suitable grounding cable with a gage of at least 4 mm² (not included).

Installation must be carried out properly by trained personnel and according to commonly accepted technical standards. The system should only be operated for the first time when it is certain that the area is not potentially explosive.

If deviations are evident during startup due to transport damage (e.g. no display, no backlighting), disconnect the scale from the power supply and contact the Sartorius Service Center.

Connect the scale to the equipotential bonding conductor using an equipotential bonding cable with a gage of at least 4 mm².

- ▶ Connect the cable lug of the equipotential bonding cable to the grounding terminal of the scale.
- ▶ Connect the equipotential bonding cable to the customer-supplied equipotential bonding conductor.

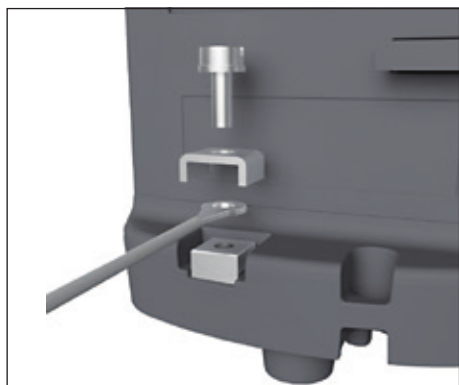


Connecting a PC/Notebook

- ▶ Insert the USB cable into a USB socket (e.g. on a PC or laptop).


Connecting an AC Adapter (Optional)

- ▶ Insert the USB cable into the YPS06-USB AC adapter.
- ▶ Plug the AC adapter into the wall outlet (supply voltage).

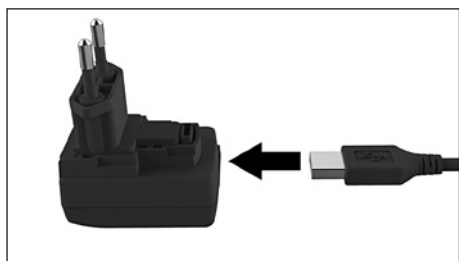

4.5 Anti-theft Locking Device


- ▶ If required, secure the scale at the back.

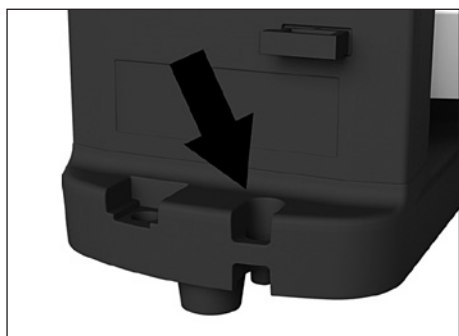

5 Commissioning

Warm-up Time


To ensure accurate results are delivered, the scale must warm up for at least 30 minutes after initial connection to the power supply. Only after this time will the scale have reached the required operating temperature.

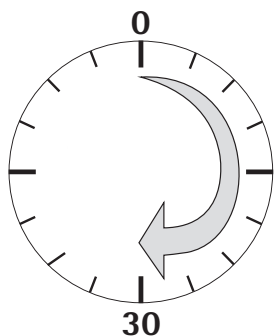


6 Operation

6.1 Switching the Device On/Off

Switching On


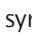

- ▶ Briefly press the  key (On / Standby).
- ▷ The automatic self-test runs. This ends when the display shows 0.0 g.
- ▶ If another value is displayed: Set the scale to zero via the **·0|T·** key.

Switching Off


- ▶ Press and hold the  key for several seconds (On / Standby).
- ▷ The scale switches to standby mode.

6.2 Lock Keyboard/Weight Display

Locking

- ▶ Briefly press the  key (On / Standby) to lock the keypad and turn off the weight display.
- ▷ The padlock symbol  flashes for several seconds.
- ▶ Press the padlock symbol  while flashing to activate the lock.
- ▷ The keypad/weight display is locked and the padlock symbol lights up continually.

Unlocking

- ▶ Press the padlock symbol  to deactivate the lock.
- ▶ Enter the password (if set) (see Chapter 6.7.2.6, page 27).
- ▷ The lock is deactivated.


6.3 Zeroing/Taring

- ▶ Briefly press the **·0|T·** key.

6.4 Adjustment



The scale needs to be re-leveled and then adjusted each time its setup location is changed.

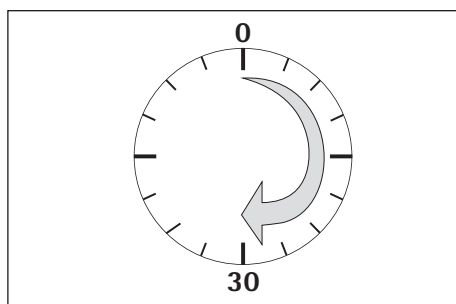



Warm-up Time

To ensure accurate results are delivered, the scale must warm up for at least 30 minutes after initial connection to the power supply. Only after this time will the scale have reached the required operating temperature.

- ▶ Wait approx. 30 minutes after connecting the scale to the power supply before adjusting the scale and weighing.


6.4.1 Calibration

- ▶ Press the **·0|T·** key for approx. two seconds.
- ▷ The pre-set calibration weight appears in the display (e.g. 5000 g).
- ▶ If required, select a different calibration weight via the  /  key.
- ▶ Confirm the displayed calibration weight via the **OK** key.
- ▷ CAL.EXT. appears on the display and the negative calibration weight.
- ▶ Center the calibration weight on the weighing pan.

- ▷ The calibration is performed. The calibration is complete when **CALIBON** appears in the display.
- ▶ Remove the calibration weight from the weighing pan.

6.5 Weighing

6.5.1 Weighing with One Decimal Place

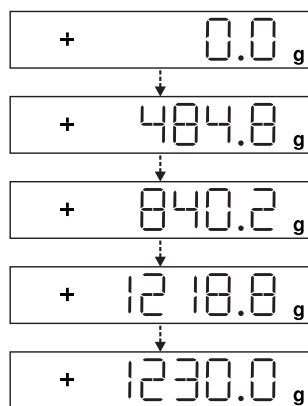

- ▶ Place the empty paint can on the weighing pan.
- ▶ Briefly press the **0|T** key to zero.
- ▷ The display shows "0.0 g."
- ▶ Add the first component "484.8 g."
- ▶ Read off the weight when the stability symbol (in this example) "g" is displayed.
- ▶ Add the other components until the desired weight (formula) is reached.
- ▶ Remove the filled paint can from the weighing pan.




Danger of Scale Damage!

- Never close a paint can using a hammer while it is still on the weighing pan.
- ▶ When closing the paint can, place it on a firm, stable surface.

6.5.2 Weighing with Two Decimal Places



A menu setting is required for weighing with two decimal places (see Chapter 6.7.2.4 "Activating the Toggle Key," page 26).

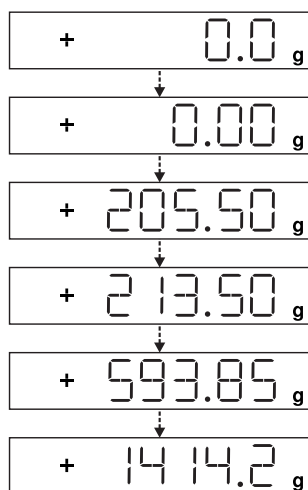

- ▶ Place the empty paint can on the weighing pan.
- ▶ Briefly press the **0|T** key to zero.
- ▷ The display shows "0.0 g."
- ▶ Press the toggle key **↵**.
- ▷ The display shows "0.00 g."
- ▶ Add the first component "205.50 g."
- ▶ Read off the weight when the stability symbol (in this example) "g" is displayed.
- ▶ Add the other components until the desired weight (formula) is reached.
- ▶ Remove the filled paint can from the weighing pan.



When the scale is tared and the second decimal place with a resolution of 0.05 g is activated via the toggle key **↵**, then weighing up to 999.95 g with two decimal places can be performed. Values over 999.95 g can only be weighed using one decimal place.



Danger of Scale Damage!

Never close a paint can using a hammer while it is still on the weighing pan.

- ▶ When closing the paint can, place it on a firm, stable surface.

6.6 Applications

6.6.1 Calculation by a Factor

This function enables you to weigh in amounts that are smaller or larger than that of your basic formula for a specific paint color (e.g. 250 ml of a 1 l formula).

The factors (amounts) can be set via the factor key $\boxed{\text{F}} \blacktriangleleft$ and $\boxed{\wedge} / \boxed{\vee}$ in a range of 0.1 to 6.0.

The following factors can be set directly via the factor key $\boxed{\text{F}} \blacktriangleleft$:

0.25 0.5 0.75 1.0 1.5 2.0 2.5 3.0 3.5 4.0 4.5 5.0.

Using the keys $\boxed{\wedge}$ (up) and $\boxed{\vee}$ (down), the factor can be changed:

- in the range 0.10 to 1.0 in increments of 0.01
- in the range 1.0 to 6.0 in increments of 0.1


Factor Calculation Example

As you add the components of your formula, the weight is displayed in "g."

Let's suppose you want to weigh 250 ml for a basic formula that has a total of 1 l, and you don't want to have to manually recalculate the individual components of the formula.

The basic formula for 1 liter:

	250 g	Component 1
+	250 g	Component 2
+	500 g	Component 3
Total:	1000 g	

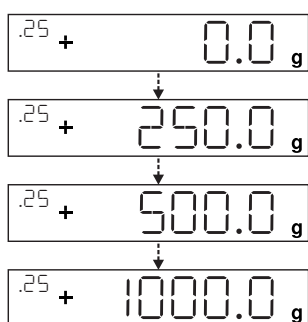

- ▶ Place the empty container on the weighing pan.
- ▶ Briefly press the O/T key to tare.
- ▶ Press the factor key $\boxed{\text{F}} \blacktriangleleft$ several times until the factor ".25" is displayed below the factor key.
- ▶ Slowly add the first component "250 g" until the display shows "250 g."
- ▶ Add the second color component "250 g" until the display shows "500 g."
- ▶ Add the third component "500 g" until the display shows "1000 g."

This concludes the recalculation example. According to the display, exactly 1000 g was poured in, but the paint can actually contains 250 g by weight in accordance with the factor you selected.

The procedure is the same for any other conversion factor.

6.6.2 Weighing Using the Recalculation Function

Let's suppose that you poured in too much of one color component for a given formula (in this example, a four-component recipe).

This example further assumes that you previously poured in all of the other amounts exactly according to each of the values you entered and saved them by pressing the MEM key **OK**.


- ▶ Press the **▼** key to start the recalculation program.
- ▷ "C" flashes on the display.
- ▶ Correct the value using the **▲**/**▼** key to match the specified formula value.
- ▶ Press the MEM key **OK**.
- ▷ The scale calculates the amount to be added for each of the components that were already poured. The display shows the amounts required to correct the formula up to the point at which the overpour occurred.
- ▶ After the correction has been completed, you can continue filling the remaining components.




You can correct overpours as often as needed, as long as the total weight of the formula does not exceed the scale's maximum weight.

Keep in mind that the total quantity of paint (liter) at the conclusion of filling increases each time you correct a component. Press the **☐** key to display the correction factor of the fill quantity: "C" = correction factor.

Recalculation Example (Gross Weight)

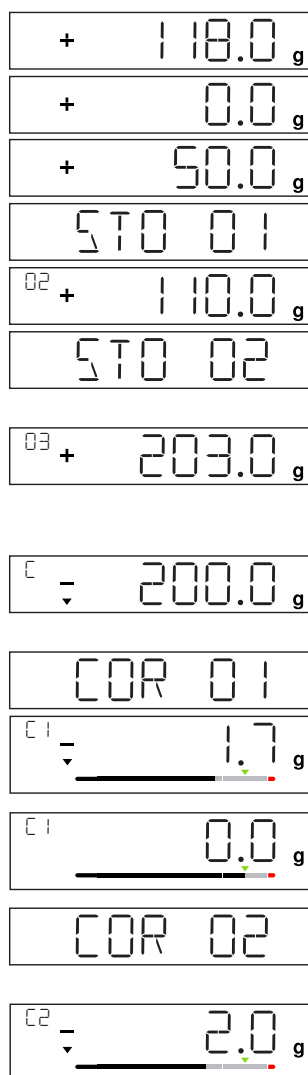

- ▶ Place the empty container on the weighing pan.
- ▷ The scale shows the weight of the empty paint can.
- ▶ Briefly press the **0/T** key to tare.
- ▶ Slowly add the first component (50 g) of the formula until the display shows "50 g."
- ▶ Briefly press the **OK** key to save the value.
- ▷ "STO 01" appears on the display, the first value is saved.
- ▷ "02" appears in the top left of the display (second color component).
- ▶ Add the second color component (60 g) until the display shows "110 g."
- ▶ Briefly press the **OK** key to save the value.
- ▷ "STO 02" appears on the display, the second value is saved.
- ▷ "03" appears in the top left of the display (third color component).
- ▶ Add the third color component (90 g) until the display shows "200 g."
- Oops! You poured in too much (203 g). The correct value for the formula is 200.0 g.**
- ▶ Press the **▼** key.
- ▷ The recalculation is started. "C" flashes in the top left of the display.
- ▶ Press the **▼** key until the correct weight value "200 g" is displayed.
- ▶ Briefly press the **OK** key to confirm the corrected value.
- ▷ "COR 01" flashes briefly on the display (correction of the first color component).
- ▷ "C1" appears in the top left and the weight value to be corrected "- 1.7 g."
- ▶ Add 1.7 g of the first color component until the display shows "0.0 g" or the bar graph stops below the green arrow.
- ▶ Confirm the correction for the first color component by pressing the **OK** key.
- ▷ "COR 02" flashes briefly on the display (correction of the second color component).
- ▷ "C2" appears in the top left and the weight value to be corrected "- 2.0 g."



- ▶ Add 2.0 g of the second color component until the display shows "0.0 g" or the bar graph stops below the green arrow.



- ▷ "STO 02" appears on the display, the second (corrected) value is saved.
- ▷ You are returned to the formulation program automatically.



- ▷ "04" appears in the top left of the display (fourth color component).



- ▶ Press the key to check the amount of the total weight.
- ▷ The correction factor "C 1.03" appears on the display for several seconds. Total weight = weight of specified formula x correction factor.



- ▷ "04" appears again in the top left of the display after the correction factor is displayed (fourth color component).
- ▶ Add additional color components of the formula as described above.

This concludes the recalculation example.

6.7 Menu Settings

6.7.1 Accessing the SETUP Menu

Accessing the SETUP menu and settings is described in the following using "Adapting the scale to ambient conditions" as an example (SETUP -> SCALE -> AMBIEN.):

- ▶ Press the key for approx. two seconds.
- ▷ Level 1 of the SETUP menu is displayed.
- ▶ Select the SETUP menu item of the first level using the / keys.
- ▶ Press the key.
- ▷ Level 2 of the SETUP menu is displayed.
- ▶ Select the SCALE menu item of the second level using the / keys.
- ▶ Press the key.
- ▷ Level 3 of the SETUP menu is displayed.
- ▶ Select the AMBIEN. menu item of the third level using the / keys.
- ▶ Press the key.
- ▷ Level 4 of the SETUP menu is displayed.
- ▶ Select the desired setting using the / keys.
- ▶ Press the key.
- ▷ The setting is applied, "o" appears on the display. (This concludes the example.)
- ▶ Press the key several times to exit the menu.



A detailed list of possible settings can be found in Chapter 3.4 "Menu List," page 12.

6.7.2 Configuring the Main Menu Settings

6.7.2.1 Accessing the Setup Menu

- ▶ Press and hold the key approx. 2 sec.
- ▷ SETUP (level 1) appears on the display.

6.7.2.2 Language Setting

Level 1 Level 2

LANG.		▶ Press $\square\wedge$, select LANG.
		▶ Press $\square\text{OK}$.
\mathbb{D}	o German	▶ Press $\square\wedge/\square\vee$, select language.
UK/US	English	▶ Press $\square\text{OK}$, "o" appears.
F	French	▶ The desired setting is applied.
I	Italian	▶ Press $\square\text{C}$ several times to exit the menu.
etc.		

6.7.2.3 Standard Default Settings (0.1g)/Polyrange (0.05g/0.1g) and Grams/PT./PD.

The default settings which are active when the scale is switched on can be found under "SETUP > SCALE > UNIT" and "SETUP-SCALE - DECIMALS":

▶ Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1 Level 2 Level 3 Level 4

SETUP				▶ Press $\square\text{OK}$.
--- SCALE				▶ Press $\square\text{OK}$.
--- WT.UNIT	Units			▶ Press $\square\wedge/\square\vee$, e. g. select DECIMALS.
	--- o GRAMS			▶ Press $\square\text{OK}$.
	--- PT.P.LB			▶ Press $\square\wedge/\square\vee$, e. g. select ALL.
--- DISP.DEC.	ACCURACY			▶ Press $\square\text{OK}$, "o" appears.
	--- o ALL			▶ The new code is set.
	--- POLYR.			▶ Press $\square\text{C}$ several times to exit the menu.

6.7.2.4 Activating the Toggle Key

When the toggle key $\square\text{T}$ is active, you can use it to toggle the unit between, e.g. grams, PT.P.LB., or the decimal point. The unit and/or decimal place is toggled when the key is pressed.

▶ Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1 Level 2 Level 3 Level 4

SETUP				▶ Press $\square\text{OK}$.
--- APP.PRG.				▶ Press $\square\wedge/\square\vee$, e. g. select APP.PRG.
--- TOGGLE.				▶ Press $\square\text{OK}$.
	--- o ON			▶ Press $\square\wedge/\square\vee$, e. g. select ON.
	--- OFF			▶ Press $\square\text{OK}$, "o" appears.
				▶ Toggle key $\square\text{T}$ is activated.
				▶ Press $\square\text{C}$ several times to exit the menu.

Configuring the Toggle Key $\square\text{T}$ Function

Pressing the toggle key $\square\text{T}$ toggles the scale between the default settings (see page Chapter 6.7.2.3, page 26) and settings defined in "SETUP - APPLICATION - UNIT" and "SETUP - APPLICATION - DECIMALS."


▶ Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1	Level 2	Level 3	Level 4
SETUP			► Press OK .
--- APP.PRG.			► Press ▲ / ▼ , select APP.PRG.
	--- UNIT 2		► Press OK , press ▲ / ▼ , select UNIT 2.
		--- o GRAMS	► Press OK , press ▲ / ▼ , select setting (e.g. GRAMS).
		--- PT.P.LB	► Press OK , "o" appears indicating the desired setting is applied.
	--- DEC 2		► Press C .
		--- ALL	► Press ▲ / ▼ , select DEC 2.
		--- o POLYR.	► Press OK , press ▲ / ▼ , select setting.
			► Press OK , "o" appears indicating the desired setting is applied.
			► Press C several times to exit the menu.

6.7.2.5 Activating the "LOCK" Function

The "LOCK" function protects the scale from unauthorized use. When this function is active, the scale readout shows weight values only when there is active communication between the scale and a PC. If communication is interrupted, the readout goes blank and the display shows a padlock symbol. Activation of the LOCK function is configured under "EXTRAS."

► Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1	Level 2	Level 3	Level 4
DEVICE			► Press ▲ / ▼ , select DEVICE, press OK .
--- EXTRAS			► Press ▲ / ▼ , select EXTRAS, press OK .
	--- LOCK		► Press ▲ / ▼ , select LOCK, press OK .
		--- o ON	► Press ▲ / ▼ , e. g. select ON.
		--- OFF	► Press OK , "o" appears.
			► The "LOCK " function  is activated.
			► Press C several times to exit the menu.

6.7.2.6 Password Request

In addition to the "LOCK" function, you can also configure password protection for additional security. With this feature, the "LOCK" function can only be deactivated "OFF" by entering the password you configure.

Entering the Password

When the password is requested, the numbers 1 2 3 4 5 6 appear on the display. You can switch to the numbers 7 8 9 0 and back again via the **▲**/**▼** keys.

- Enter the password by entering the individual numbers on the display.
- ▷ When you enter the correct password, the "LOCK" function will be disabled.

Changing Passwords

The password is numeric and can have up to six digits. Entering six spaces deletes the password, which deactivates the password function. This restores the device to its original setting (scale is not password-protected).

► Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1 Level 2 Level 3

INPUT	► Press \uparrow/\downarrow , select INPUT, press OK .
--- PASSWD.	► Press \uparrow/\downarrow , select PASSWD., press OK .
--- OLD PW	▷ When an old password is active, OLD PW appears briefly so that you can enter the old password.
---	▷ This appears "-----".
---	▷ The first line flashes.
---	► Make the following inputs:
---	– \uparrow/\downarrow keys: Selects numbers 0 to 9.
---	– C : Goes back to the previous number.
---	– OK : Confirms entry or goes to the next number.
---	► Repeat to enter the remaining numbers.
---	▷ If you make an incorrect entry, NOT OK appears. Press OK and reenter the old password.

NEW PW	▷ When you make a correct entry, NEW PW appears briefly so that you can enter the new password.
	▷ This appears "-----".
	▷ The first line flashes.
	► Make the following inputs:
	– \uparrow/\downarrow keys: Selects numbers 0 to 9.
	– C : Goes back to the previous number.
	– You can enter spaces to delete the number/password.
	– OK : Confirms entry or goes to the next number.
	► Repeat to enter the remaining numbers.
	▷ The password has been changed.
	► Press C several times to exit the menu.

6.7.2.7 Resetting the Scale: "RESET"

If required, you can restore the scale to its factory settings.

Note:

If you have activated the password function, this feature is password-protected.

► Access the Setup menu (see Chapter 6.7.2.1, page 25).

Level 1 Level 2 Level 3 Level 4

SETUP	► Press \uparrow/\downarrow , select SETUP, press OK .
--- GEN.SRV.	► Press \uparrow/\downarrow , select GEN.SRV., press OK .
--- MEN.RES.	► Press \uparrow/\downarrow , select MEN.RES., press OK .
--- DEFAULT.	► Press \uparrow/\downarrow , select DEFAULT.
--- o NO	► Press OK , "o" appears.
	▷ The factory settings are loaded.
	► Press C several times to exit the menu.

7 Care and Maintenance

7.1 Cleaning



Electrical Hazard from Voltage or Current!

Disconnect the AC adapter from the power supply. If necessary, disconnect the data cable if connected to the scale. Never open the scale or the AC adapter.

The parts contained in these cannot be cleaned, repaired, or replaced by the operator.

- Make sure that no liquid or dust gets into the scale or the AC adapter.
- Only use soft brushes and cloths for cleaning.
- Never use cleaning agents that contain solvents or abrasive ingredients (e.g. scouring cream, steel wool), which can ultimately damage the equipment.



Do not clean the following parts with acetone or aggressive cleaning agents: Mains socket, data interface, labels, and all other plastic parts.

Cleaning the Control Panel

- Turn off the device before cleaning the control panel since touching the screen could trigger unwanted inputs.

Cleaning the Scale Housing

- Clean the device.
- Use a soft cloth to dry the device.

7.2 Maintenance



Electrical Hazard from Voltage or Current!

Repair work on the (optional) AC adapter must only be carried out by trained service technicians. Contact Sartorius Service for proper repairs (see Chapter 13.1, page 35).


To ensure the continued accuracy of your scale, we recommend scheduling regular servicing at least once a year.

The Sartorius Service Center offers different service contracts with maintenance intervals that are tailored to your needs.

A calibration certificate should always be issued as part of every maintenance session.

Safety inspections of the AC adapter and its connections must be performed at appropriate intervals by a qualified electrician (e.g. every two years).

8 Faults

Problem	Cause	Remedy
No segments appear on the weight display	– No AC power is available	– Check power supply
The weight readout shows "LOW"	– No weighing pan on the scale	– Position the weighing pan
The weight readout shows "HIGH"	– Weighing capacity exceeded	– Unload the scale
The weight readout changes constantly	– Unstable ambient conditions – Excessive vibration or draft – Weighing pan is being affected at some point by outside influences	– Set up scale in another area – Adjust the scale settings (see Chapter 3.4 "Menu List," page 12)
The weight readout is obviously incorrect	– The sample is not stable – Scale not tared before weighing	– Tare before weighing
No weight value is shown and the padlock symbol  is displayed	– PC connection to the scale has been interrupted activating the "LOCK" function – Manual "LOCK" function is active	– Access the menu to make the necessary adjustment and switch off the "LOCK" function – Check the connection – Switch off the manual "LOCK" function

9 Storage

If the device is not set up immediately after delivery, or will not be used temporarily, the ambient conditions listed in Chapter 11 "Technical Specifications," page 32 must be observed for storage.



Only store the device in dry buildings and do not leave the device outdoors.

In case of improper storage, no liability will be assumed for resulting damage.

10 Disposal

Packaging

The packaging is made from environmentally-friendly materials that can be used as secondary raw materials. The packaging is to be taken to a local waste disposal site if no longer required.

Device



The equipment, including accessories and empty non-rechargeable and rechargeable batteries, does not belong in your regular household waste; this equipment is manufactured from high-grade materials which can be recycled and reused. European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE) requires that electrical and electronic equipment be collected and disposed of separately from other unsorted municipal waste, with the aim of recycling it. The crossed-out waste bin symbol indicates that separate collection is required.

In Germany and several other countries, Sartorius itself assumes responsibility for the return and legally compliant disposal of its electronic and electrical products. These products may not be placed with household waste or brought to collection centers run by local public disposal operations – not even by small commercial operators. Please contact the Sartorius Service Center.

In countries that are not members of the European Economic Area (EEA) or where no Sartorius subsidiaries or dealerships are located, please contact your local authorities or a commercial disposal operator.

Prior to disposal and/or scrapping of the equipment, any batteries should be removed and disposed of at local collection points.

Sartorius will not take back equipment contaminated with hazardous materials (ABC contamination) – either for repair or disposal.

Addresses for Disposal

Detailed information with service addresses for the disposal of your device can be found on our website (www.sartorius.com).

11 Technical Specifications

11.1 General Data

Specification	Unit	Value
ID code (explosion protection)		II 3G Ex ic nA IIB T4 Gc as per EC Type Examination Certificate no. FM15ATEX0008X
Power Supply		Only via USB interface or Sartorius AC adapter YPS06-USB
Input supply voltage	V _{DC}	+4.5 to 5.0
Power consumption	W	2.0 (typically)
Other data		IP40 in accordance with EN 60529/IEC 60529
Ambient Conditions		
The specifications apply under the following ambient conditions:		
Environment		For indoor use only
Operational capability	°C	Guaranteed between +5 and +40
Storage and shipping	°C	-10 to +60
Relative humidity	%	15 to 80 for temperatures up to 30 °C non-condensing, decreasing linearly to 50% relative humidity at 40 °C
Electromagnetic Compatibility		
		In accordance with EN 61326-1/IEC61326-1 Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 1: General requirements
Interference resistance		Basic requirements
Transient emissions		Class B Suitable for use in residential areas and areas that are connected to a low voltage network that also supplies residential buildings
Available Application Programs		
		Recalculation, factor calculation, formula
AC Adapter YPS06-USB		
USB power plug (5 V/900 mA)		Type FW7712 (manufacturer's certificate)
Primary		100–240 V~, -10%/+10%, 50–60 Hz, 0.125 A
Secondary		5 V _{DC} , ±5%, 900 mA (max.)
Other data		Protection class II IP40 in accordance with EN 60529/IEC 60529

11.2 Model-specific Data

Specification	Unit	Value
Model		PMA.Evolution
		EVO1Y
Weighing capacity	g	7500/999.95
Readability	g	0.1/0.05
Tare range (subtractive)	g	-7500
External adjustment weight / accuracy class	kg	1, 2, 5 / F2 or better
Size of weighing pan	Ø mm	233
Net weight	kg	2.4

11.3 USB Port (PC Connection)

11.3.1 Purpose

This device can be connected to a PC via the USB interface.

A virtual serial interface (virtual COM port) is set up on the PC as a device type via the USB port. This virtual serial interface is identified and operated by the application program.

The xBPI and SBI protocols can be transmitted via the virtual serial interface.

11.3.2 Installing the Software Driver

11.3.3 Installing the Software Driver (Windows Update)

- ▶ Connect the scale to the USB port of the computer (see Chapter 4.3 "Installing the Scale," page 17).
- ▷ Windows will detect the scale connected to the USB port as a device.
If the device is being connected for the first time, the Windows Installation Wizard will run automatically.
- ▶ Follow the instructions that appear.
- ▶ To complete the installation, click on Finish.
- ▷ The virtual interface is now ready for operation.

11.3.4 Installing the Software Driver (via CD)

- ▶ Ensure that the scale is not connected to the PC.
- ▶ Insert the supplied CD into the PC.
- ▶ If the Installation Wizard does not start automatically after you insert the CD, then manually start driver installation via Setup.bat located on the CD.
- ▶ Follow the instructions that appear.
- ▶ To complete the installation, click on Finish.
- ▷ The virtual interface is now ready for operation.
- ▶ Connect the scale to the USB port of the computer (see Chapter 4.3 "Installing the Scale," page 17).



Windows® usually adds the virtual port in the position following your highest-numbered COM port.

Example:

For a PC with up to four COM ports, the new virtual port would then be COM5 (see Device Manager).

11.3.5 Installation Instructions for Windows XP® and Above

Changing the Port Number

If you use the USB interface with programs that limit the number of COM port designations (e.g., only COM1, 2, 3, 4), you may have to assign one of these port numbers to the new virtual port.

- ▶ Open the setting for the USB serial port in the Windows® Control Panel:
 - START > My Computer > Control Panel
 - System > Hardware > Device Manager
- ▶ Open the Connections submenu.
- ▶ Double-click on USB Serial Port.
- ▶ Select Port Settings > Advanced.
Use the "COM Port Number" button to change the port number.

Uninstalling the Driver

You can uninstall the software driver for the USB port via the Device Manager (only if the scale is connected):

- ▶ Use the right mouse button to click on the respective port.
- ▶ Then select "uninstall" from the context menu that appears.

12 Accessories

Accessories	Order Number
AC adapter (5 V/900 mA)	YPS06-USB
USB connection cable	YCC01-0040M5
Mains adapter set YPS06-USB <ul style="list-style-type: none"> – USA and Japan – Europe/EU – United Kingdom 	YAK01
Mains adapter set YPS06-USB <ul style="list-style-type: none"> – Australia – South Africa – Argentina – Brazil 	YAK02
Mains adapter set YPS06-USB <ul style="list-style-type: none"> – India – Korea – China 	YAK03
Ex-link converter	YCO14-Z
Link cable	
from converter to scale, 10 m	YCC01-0052M10
from converter to scale, 20 m	YCC01-0052M20
from converter to scale, 30 m	YCC01-0052M30
Equipotential bonding cable, 2 m	YCC01-X046M2
In-use dust cover	
for control panel, pack of 10	YDC03PMA10
for support arm, PMA.Evolution, pack of 10	YDC03PMA-CO10
for weighing pan, PMA.Evolution, pack of 10	YDC03PMA-WP10
Calibration weights	
– 5 kg, accuracy class F2	YCW654-AC-00
– 2 kg, accuracy class F2	YCW624-AC-00
– 1 kg, accuracy class F2	YCW614-AC-00

13 Conformity & Licenses

13.1 EC Declaration of Conformity

The attached declaration of conformity confirms the compliance of the paint-mixing scale, model/series EV01Y, with the directives cited.



EU-Konformitätserklärung EU Declaration of Conformity

Hersteller
Manufacturer Sartorius Lab Instruments GmbH & Co. KG
37070 Goettingen, Germany

erklärt in alleiniger Verantwortung, dass das Betriebsmittel
declares under sole responsibility that the equipment

Geräteart
Device type Farbmischwaage
Paint mixing scale

Baureihe
Type series EVO1Y1, LAB1Y1

in der von uns in Verkehr gebrachten Ausführung allen einschlägigen Bestimmungen der folgenden Europäischen Richtlinien – einschließlich deren zum Zeitpunkt der Erklärung geltenden Änderungen – entspricht und die anwendbaren Anforderungen folgender harmonisierter Europäischer Normen erfüllt:
in the form as delivered fulfils all the relevant provisions of the following European Directives – including any amendments valid at the time this declaration was signed – and meets the applicable requirements of the harmonized European Standards listed below:

2014/30/EU Elektromagnetische Verträglichkeit
Electromagnetic compatibility
EN 61326-1:2013

2011/65/EU Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten (RoHS)
Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)
EN 50581:2012

2014/34/EU Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen
Equipment and protective systems intended for use in potentially explosive atmospheres
EN 60079-0:2012, EN 60079-11:2012, EN 60079-15:2010

Kennzeichnung II 3G Ex ic nA IIB T4 Gc
Marking

EG-Baumusterprüfbescheinigung Nummer FM15ATEX0008X
EC-Type Examination Certificate number

Jahreszahl der CE-Kennzeichenvergabe / *Year of the CE mark assignment:* 16

Sartorius Lab Instruments GmbH & Co. KG
Goettingen, 2016-04-20

i.v. P. B. — 16


Dr. Reinhard Baumfalk
Vice President R&D

i.v. 14/1

Dr. Dieter Klausgrete
Head of International Certification Management

Diese Erklärung bescheinigt die Übereinstimmung mit den genannten EU-Richtlinien, ist jedoch keine Zusicherung von Eigenschaften. Bei einer mit uns nicht abgestimmten Änderung des Produktes verliert diese Erklärung ihre Gültigkeit. Die Sicherheitshinweise der zugehörigen Produktdokumentation sind zu beachten.

This declaration certifies conformity with the above mentioned EU Directives, but does not guarantee product attributes. Unauthorised product modifications make this declaration invalid. The safety information in the associated product documentation must be observed.

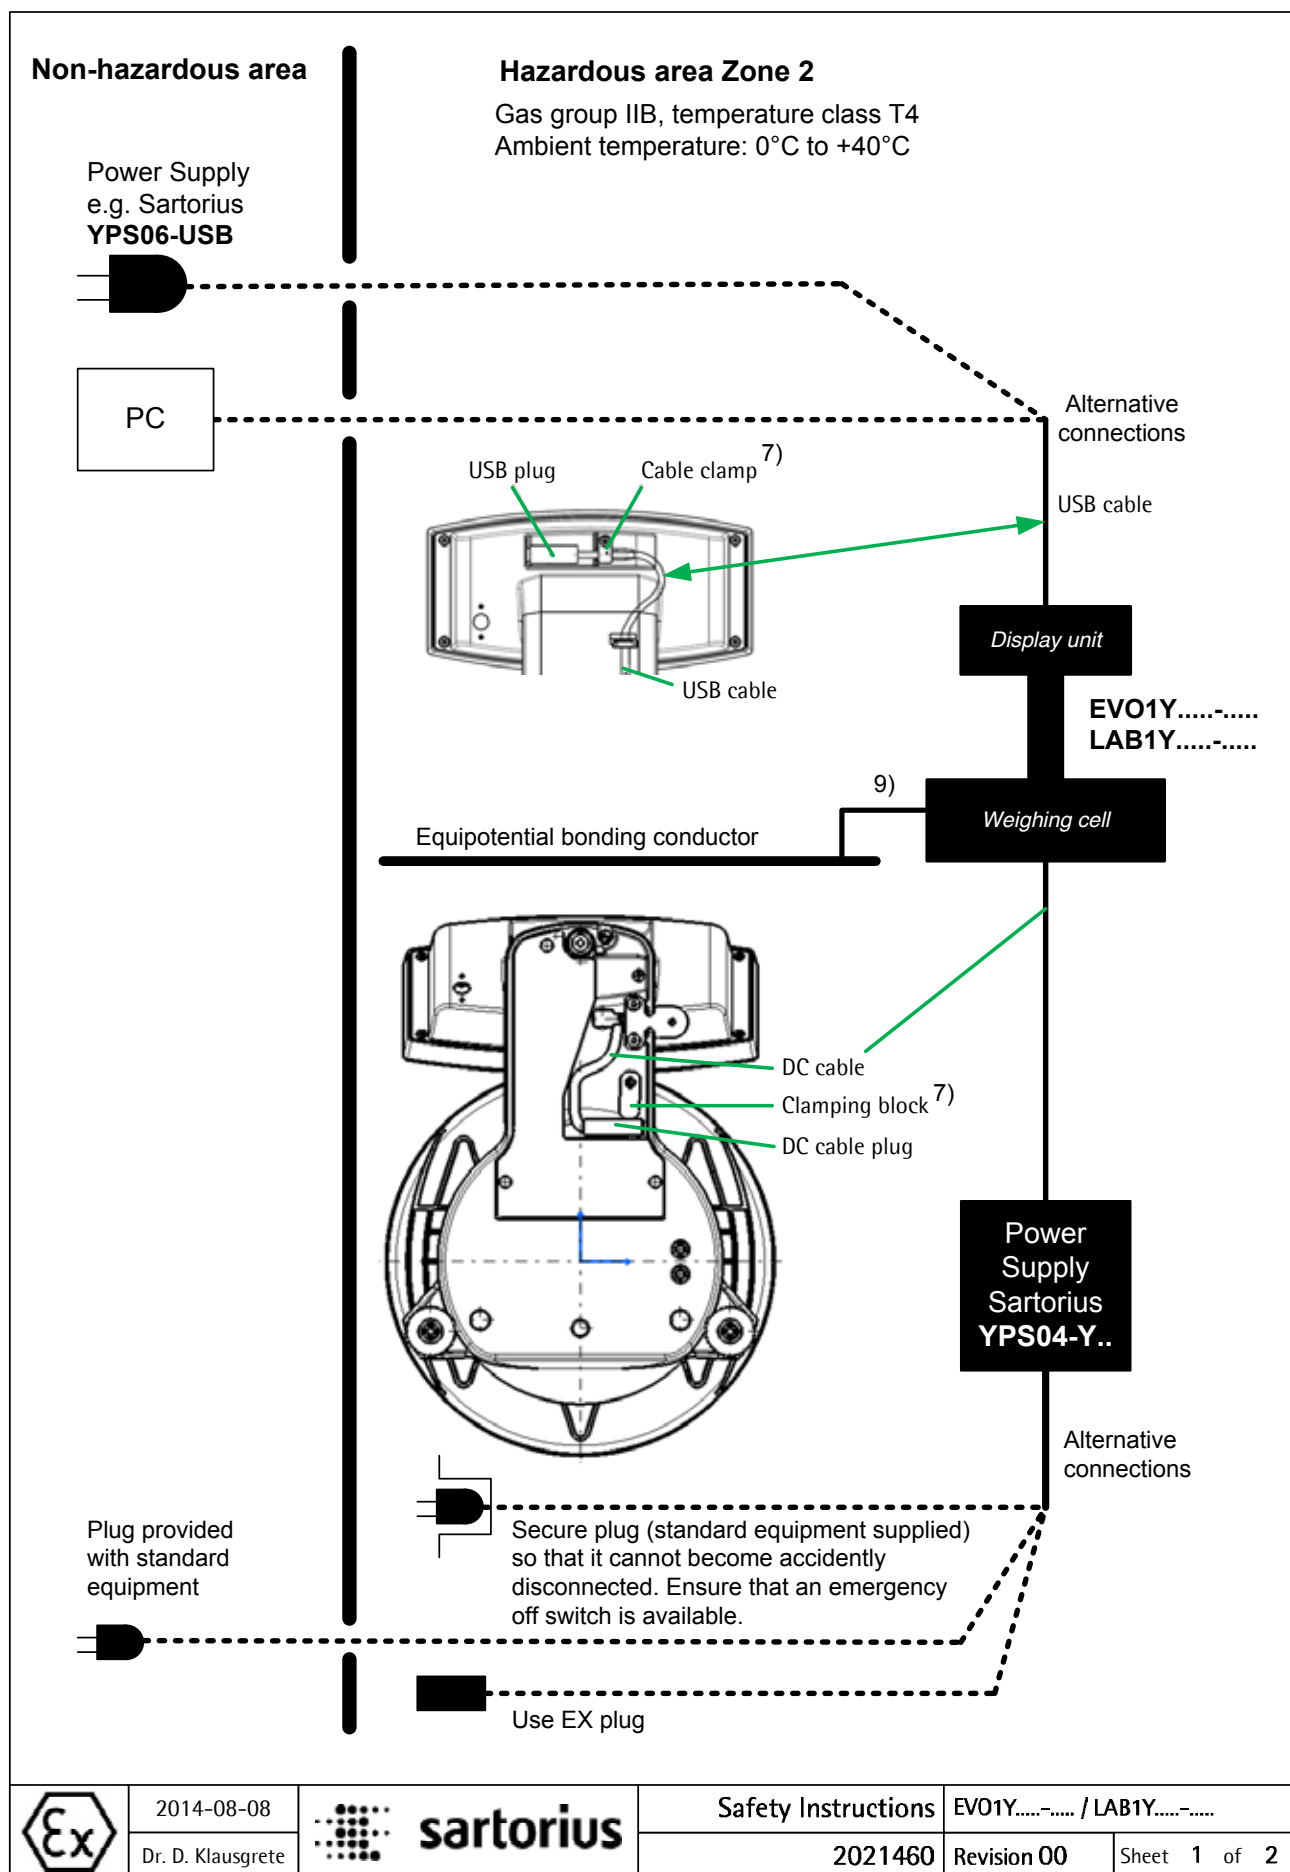

2014-08-08

Dr. D. Klausgrete

**sartorius**

Safety Instructions

2021460



EVO1Y.....-..... / LAB1Y.....-.....

Revision 00

Sheet 1 of 2

These safety instructions apply to the installation, operation, maintenance and repair of the equipment

- 1) Install the equipment in compliance with applicable laws, rules and regulations, ordinances and standards. In particular, be sure to conform to the European Standards EN 60079-14 (Explosive atmospheres – Part 14: Electrical installations design, selection and erection).
- 2) Be sure to follow the installation, operating, maintenance and servicing instructions given in the manuals supplied.
- 3) The equipment shall be installed in such a way that it is protected against the entry of solid foreign objects or water capable of impairing the safety of the apparatus. Reduce the risk of mechanical damage to a minimum.
- 4) Exposure to UV radiation is not allowed!
- 5) The connecting cable of the display unit must be prevented against damage and stress caused by strain.
- 6) Prior to opening the equipment, disconnect the power supply or make sure that there is no potentially explosive atmosphere or any other explosion hazard in the surrounding area!
- 7) The data cable connected to the scale (weighing unit) is considered as non intrinsically safe circuit. The connection is secured against accidental disconnection and may only be plugged in or disconnected when the power is switched completely off. Check the correct function of the data transfer before you use the equipment in a hazardous location. Lock the USB plug of the USB cable by the cable clamp and in case of the option „additional power supply board“ lock the plug of the DC cable by the clamping block.
- 8) If the equipment does not operate properly, unplug it immediately from line power (mains supply)!
- 9) All metal parts must be electrically connected to the terminal for the equipotential bonding conductor (PA). The equipment operator is obligated to connect a lead with a gauge of at least 4 mm² (cross section) to the PA terminal located on the housing of the scale. The low resistance of this connection to the PA bus bar must be checked when the system is installed at the intended place of use. The shielding of the connecting cables may only be used for grounding when no impermissible difference in voltage is generated and, if necessary, the shielding is able to conduct the equipotential current.
- 10) Avoid generating static electricity. Use only a damp cloth to wipe down the equipment. The equipment operator shall be responsible for preventing any risks caused by static electricity.
- 11) Keep chemicals and other agents, which can corrode the housing seals and cable sheaths, away from the equipment. These agents include oil, grease, benzene, acetone and ozone. If you are not sure about the safety of a certain substance, please contact the manufacturer.
- 12) Use equipment only in the temperature ranges indicated. Avoid exposing the equipment to heat.
- 13) The equipment operator is responsible for any non-Sartorius cables used.
- 14) At reasonable intervals, have your equipment installation checked for proper functioning and safety by a trained and certified technician.
- 15) If your equipment needs to be repaired, use only original spare parts supplied by the manufacturer!
- 16) Any tampering with the equipment by anyone, other than repair work done by authorized Sartorius service technicians, will result in the loss of EX conformity and in the forfeiture of all claims under the manufacturer's warranty. Only authorized specialists may open the equipment.
- 17) Modifications, including those to be carried out by Sartorius employees, may be permitted only after the express written authorization has been obtained from Sartorius.

	2014-08-08	 sartorius	Safety Instructions	EV01Y.....-..... / LAB1Y.....-.....	
	Dr. D. Klausgrete		2021460	Revision 00	Sheet 2 of 2

14 Appendix

14.1 Service

Repairs may be performed by authorized service personnel or by the responsible service representative.

Please contact Sartorius Service for all service needs, and in case of guarantee claims.

Returning Devices

You can send defective devices or parts to Sartorius.

Returned devices must be clean, in hygienically flawless condition and packed carefully.


Transport damage as well as measures for subsequent cleaning and disinfection of the parts by Sartorius shall be charged to the sender.

Service Addresses

Detailed information with service addresses for returning your device for repair can be found on our website (www.sartorius.com).

14.2 Device Dimensions

Model EV01Y1

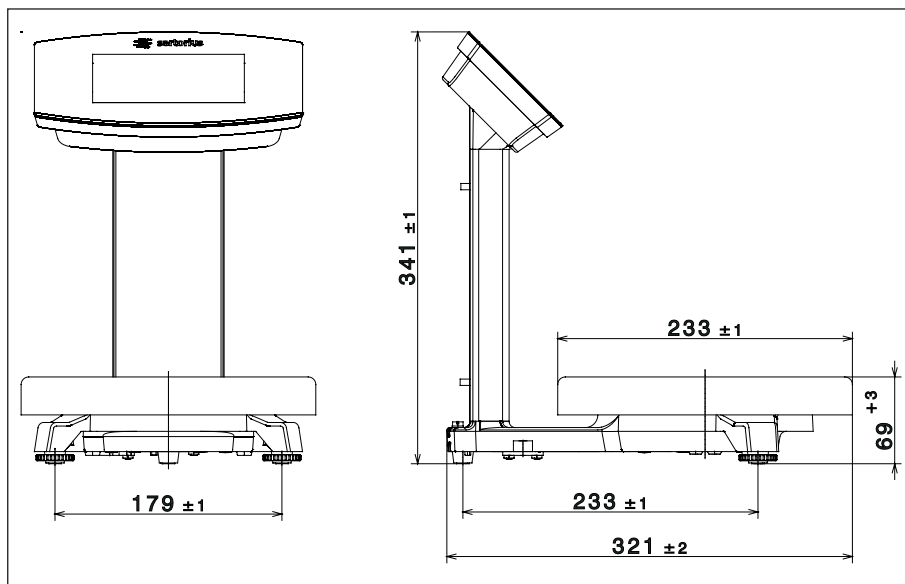

Sartorius Lab Instruments GmbH & Co. KG
Weender Landstrasse 94–108
37075 Goettingen, Germany

Phone: +49.551.308.0
Fax: +49.551.308.3289
www.sartorius.com

The information and figures contained in these instructions correspond to the version date specified below.

Sartorius reserves the right to make changes to the technology, features, specifications and design of the equipment without notice.

Masculine or feminine forms are used to facilitate legibility in these instructions and always simultaneously denote the other gender as well.

Copyright notice:

This instruction manual, including all of its components, is protected by copyright. Any use beyond the limits of the copyright law is not permitted without our approval. This applies in particular to reprinting, translation and editing irrespective of the type of media used.

© Sartorius Germany

Last updated:
04 | 2016